


SeemeCNC 4 Axis Board Dip Switch and Jumper Settings

Terminals
←

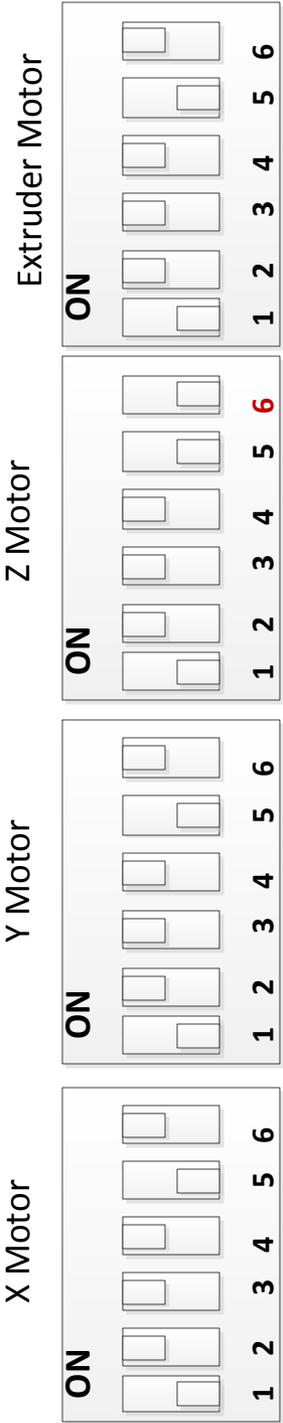

X, Y Extruder Dip settings all the same. Z dip switch 6 is off

